
AW-7204P - Wireless PIR Ceiling Mounting Detector / Pet Immunity


User Manual

AW-7204P is wireless PIR ceiling type intrusion detector with pet immunity, it adopts PIR technology intruder detector designed to detect human body temperature in a protected area, digital processing ensure a high immunity to false alarms and outstanding stability, it uses a sophisticated radio communication protocol with a high level of data safety, the detector make auto testing and report its status to the system for full supervision regularly, built-in tamper switch trigger alarm if there is any attempt to tamper with the detector, auto testing mode make testing in ease, send out low battery signal indication to alarm panel, hiding ceiling installation.

Features:


- 1. adopts self-designed MASK chip with DMT technology
- 2. anti-white light with spherical lens and sealed optical design
- 3. reliable detection performance with passive PIR technology
- 4. wireless detect distance: 6 x 6m@0°C / detection angle: 360°
- 5. wireless emitting distance is 120 ~ 150 meter (in open area)
- 6. pet immunity under 25kgs
- 7. wireless emitting frequency is 433MHz / 868MHz
- 8. working voltage is 3.0V DC (2pcs 1.5V LR6 Alkaline Battery)
- 9. Anti-EMI >30V/m(30MHz~1GHz) / Anti-White Light >8000LUX
- 10. installation height 2.4 ~ 4.8 meter (8 ~ 16 feet) / ceiling installation
- 11. consumption current is 9uA(static) / 20mA(alarm)
- 12. alarm indication is LED light flash for 2 seconds
- 13. operation temperature is -10° C to $+50^{\circ}$ C (14°F to 122°F)
- 14. storage temperature is -20°C to +60°C (-4°F to 140°F)
- 15. dimension is Φ110*40mm / ivory white color

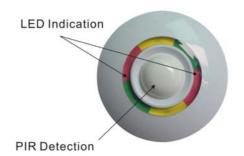

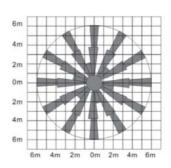

top view


Installation:

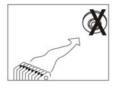

Don't face cold or hear source



Don't face the sunshine directly

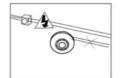


Don't install near electric cables



Don't install on a unstable base



Don't face the metal wall

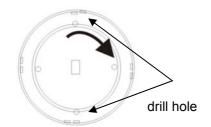

install bracket on the ceiling

- press the bottom of detector, and then clockwise rotation (arrowhead direction), so that open and take off the ceiling bracket;
- 2. install 2.4 ~ 4.8m height from the ground;
- 3. mark the drill hole and drill holes on the ceiling accordingly;
- 4. using the screws with countersink heads, so that fix the bracket on the ceiling;
- 5. fix the detector back to ceiling bracket (counter-clockwise direction) after installed the battery;
- 6. double check the stability after installed.

DIP Switch Function:

- 1. choose 3 different pulse counting as below:
 - 1-Pulse: detector make the alarm when detected 1 pulse
 - 2-Pulse: detector make the alarm when detected 2 pulse
 - 3-Pulse: detector make the alarm when detected 3 pulse


more pulse counting, the lower performance for sensitivity of capture, but more pulse counts can reduce fales alarms.


2. setting 3 different working modes as below:

Testing Mode: sending the wireless alarm signal when detector had been triggered, no time interval between two signal sending.

Normal/Saving Mode: every 2.5mins detect one time, every 65mins sending one wireless monitoring signal to report the status of detector and battery.

Coding Mode: when detector is on working status, inverse it to send an address code to alarm control panel

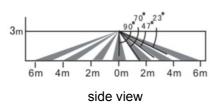

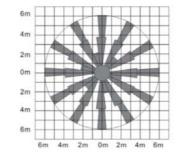

DIP Switch 1 & 2 setting corresponding working modes:


DIP 1	DIP 2	Working Mode
ON	OFF	1-Pulse
OFF	ON	2-Pulse
OFF	OFF	3-Pulse

DIP Switch 3 & 4 setting corresponding working modes:

<u>107 </u>		
DIP 3	DIP 4	Working Mode
ON	OFF	Testing
OFF	ON	Normal
OFF	OFF	Coding

top view

Inside Diagram:

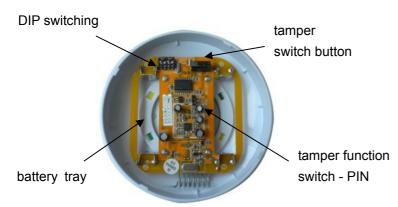

Note:

turn on tamper function, only cover one

turn off tamper function, cover 2 PINs together.

Coding Method:

(between detector and wireless alarm panel)

- 1. detector on normal mode, place the alkaline battery and LED light will flash few seconds; alarm control panel on wireless coding mode (please refer alarm control panel user manual), press tamper switch to sending the wireless signal to alarm control panel, if alarm control panel make the corresponding indicate sound, it means match code successfully.
- 2. alarm control panel on manual coding mode, enter the 9 digit address code to match, this will be a higher probability of coding success.

mounting holes 9 digit address code

Change Battery:

when detector sending the wireless signal, LED light flash, it means the low battery situation, and detector also can sending the low battery alarm indication to alarm control panel.

(2pcs 1.5V LR6 Alkaline Battery / pay attention to the anode and cathode)


on to alarm

nd cathode)

battery tray

Walk Testing on Cover Area:

- 1. detector on testing mode, pulse counting set as 1, 2 or 3-Pulse;
- 2. horizontal movement which triggers detector alarming at the remote of the detection coverage at the speed of 0.75m/s, the LED light indicator will flash few seconds;
- 3. testing in different direction to confirm the two boundaries of the coverage, ensure the detector is appointed to the central desired area;
- 4. the centre of detection area should not be towards vertical incline, if can not obtain an ideal detection area, please adjust the vertical angle to ensure direction for detector neither high or low;
- 5. once detection angle is adjusted, walk testing must be performed again;
- 6. please set detector to normal mode after finished walk testing.

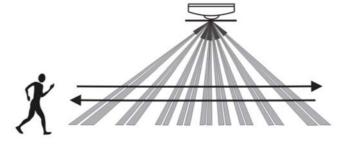

Warning: we are not responsible for the problem caused by improper operation or change the product configuration, it may lose the authority of product warranty!