

- Language independent
- Simple configuration via the backlit display
- Input for external setpoint device

Optigo OP10 is a pre-programmed controller that can be used for control of temperature,  $CO_2$ , pressure, and humidity in air handling and heating applications. It is a stand-alone controller for simpler applications. Optigo is extremely easy to install, commission and control.

Optigo uses a display with an encoder knob, making its built-in menu system very easy to use. Settings are entered by turning the encoder knob to a desired parameter/value. A value is then approved by pressing the knob.

#### **Models**

The Optigo series comprises two different models, OP5U and OP10.

OP5U has 5 in-/outputs and OP10 has 10 in-/outputs. OP10 is available in two models:

- OP10 with 24 V AC supply voltage
- OP10-230 with 230 V AC supply voltage

## Applications for OPI0 and OPI0-230

Optigo OP10 is pre-programmed with a choice of five different control modes:

- 1. Supply air control
- 2. Supply air control with outdoor compensation
- 3. Cascaded room / extract air temperature control
- 4. Radiator circuit control
- 5. Domestic hot water control

## **OP10**

Pre-programmed, configurable controller for simple applications

The Optigo OP10 range of controllers can be set to handle everything from temperature or humidity control to control of  $\mathrm{CO}_2$  or pressure. They are intended for DIN-rail mounting.

- Pre-loaded with several application modes
- 24 V or 230 V AC supply voltage
- Week-based clock / calendar function

## Inputs and outputs

Optigo OP10 has:

- 2 analogue inputs, PT1000
- 1 SPI input for an external setpoint device
- 1 universal input, PT1000 or digital
- 2 digital inputs
- 3 digital outputs
- 2 analogue outputs, 0...10 V DC

## Internal clock

Optigo OP10 has a built-in week-based real time clock with a number of different scheduler alternatives.

### Easy to install

Optigo is suitable for DIN-rail or cabinet mounting. Since the terminals are detachable, all connections can be made before Optigo is installed.

Optigo has been developed in accordance to our Ready-Steady-Go concept, simplifying every step from installation to management.




## Display and encoder knob

All setting and configuration is performed using the display and encoder knob on the front of the controller.

The menu information shown on the display is organised in a tree fashion. By using the knob you can move in between menus, set values etc.

In any of the configuration menus, pressing the encoder knob will activate change mode. You can then turn the knob to move between choices or set values. A second press of the knob will accept the choice.

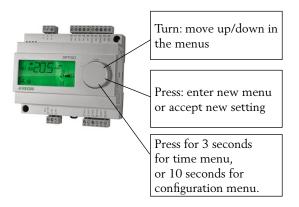

The menu system is divided into three levels:

- Base level: view mode
- The 3 second level: clock and scheduler program
- The 10 second level: configuration menus

## Display - Base level

This is an example of the display when in Base level view mode. It is normally shown when there is no operator activity.



The Base display shows current time and actual value.


There are bar-graphs showing the current output levels together with symbols showing how the outputs have been configured (Heating, Cooling or Damper etc).

There is also a symbol showing which of the five control modes is configured, as well as an alarm symbol that is displayed in the event of an alarm condition. The fan symbol (control modes 1, 2 and 3 only) is lit as long as the fan indication input is activated.

To see the values and status of all in- and outputs, simply turn the knob counter-clockwise until the text I/O is displayed and then press it. To return to the Base display, click on the knob and then turn it clockwise.

## **Display information**

The display can show the following information

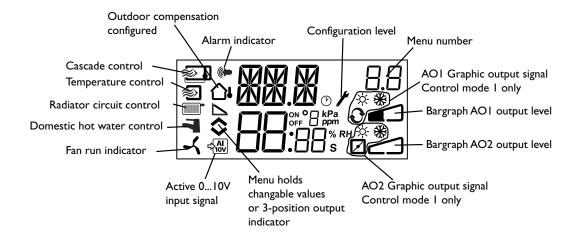

## Configuration

All configuration menus lie in the 10-seconds level. This level is accessed from the Base Display by pressing and holding the encoder button for 10 seconds.

There are numerous configuration menus covering all available options and combinations.

In some cases, making a certain choice in one menu will mean that you will only see certain other menus. For example, the menu for setting the damper minimum limit is only shown if you have configured AO2 to be a damper control output.

#### Function overview

### Selectable control functions

- 1. Supply air control
- 2. Supply air control with outdoor compensation
- 3. Cascade connected room/extract air temperature control
- 4. Radiator circuit control with outdoor curve
- 5. Domestic hot water control

## Optigo is capable of handling the following control modes

#### Ventilation

According to points 1, 2 and 3 above:

- P- or PI-control
- Can control two analogue outputs in sequence, or one 3-position actuator via two digital outputs
- Damper control, with settable minimum supply air amount
- Control of frost protection or frost protection thermostat with manual reset
- High temperature limit switch
- Electric heater cool-down function
- Digital scheduler
- Start/stop of fan via built-in relay for 230 V AC
- Digital input for extended running via timer
- Input for an external setpoint device
- Alarm management in the display as well as sum alarm output
- Heat maintaining function
- As of revision 21, a frost protection thermostat can be connected to UI1 for control modes 1-3.

#### Radiator circuit control

According to point 4 above:

- P- or PI-control
- Output 0...10 V or 3-position 24 V AC
- Settable outdoor compensation curve
- Extra correction of outdoor curve (increase at approx. zero degrees outdoor temp.)
- Room sensor can be connected for adaption of outdoor curve
- Room setpoint can be set via an external setpoint device
- Pump stop/Pump exercise
- Alarm management in the display as well as sum alarm output

## Domestic hot water

According to point 5 above:


- PID control
- 0...10 V output
- Periodic overheating to decrease risk of Legionella
- Alarm management in the display as well as sum alarm output

## Application examples

Optigo OP10 can be configured to any one of the following control modes. The three control modes on this page have much in common, and will therefore be treated in a single section.

## Supply air control

The supply air temperature is kept at the setpoint value by controlling the output signals on AO1 and AO2. A single PI control loop is used.

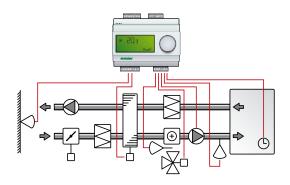


This control mode requires a sensor, "Supply air sensor", on AI1.

## Supply air control with outdoor compensation

The supply air temperature is kept at the setpoint value by controlling the output signals on AO1 and AO2. A single PI control loop is used.


The setpoint is automatically adjusted according to the outdoor temperature.

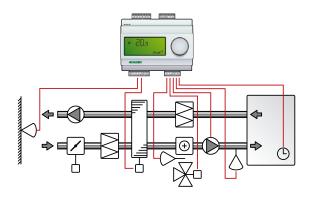

This control mode requires two sensors, "Supply air sensor" on AI1 and "Outdoor sensor" on AI2.

# Cascade connected room/extract air temperature control

An offset in room temperature, which if desired can be set via the external setpoint device, will adjust the supply air temperature setpoint so as to eliminate the room temperature offset. One PI and one P control loop are used. The supply air temperature can be minimum and maximum limited.

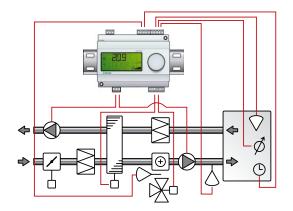

This control mode requires two sensors, "Supply air sensor" on AI1 and either "Room sensor" or "Extract sensor" on AI2.

## **Analogue outputs**

The analog outputs can be configured to the following combinations (valid for all three examples on this page):

AO1	AO2
1. Heating	-
2. Cooling	-
3. Heating	Cooling
4. Heating	Heating
5. Cooling	Cooling
6. Heating	Dampers
7. Cooling	Dampers

## 3-position control


Instead of the analogue outputs, Optigo can be configured for 3-position control (increase / decrease). Only the following output choices will then be available:

- Heating
- Cooling

DO1 is used for increase signal and DO2 for decrease. This option cannot be combined with alarm output. A single PI control loop is used.

## Radiator circuit control with outdoor curve

The water temperature setpoint is changed according to the outdoor temperature. A single PI control loop is used. A room temperature sensor can be added to give corrective action if the room temperature differs from the setpoint

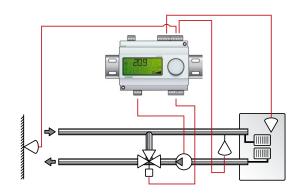

This control mode requires two sensors, "Supply temperature" on AI1 and "Outdoor sensor" on AI2.


A room temperature sensor can also be connected to UI1, permitting the room temperature offset to correct the supply temperature. Wire UI1 as an analogue input.

## 3-position control

Instead of the analogue outputs, Optigo can be configured for 3-position control (increase / decrease). DO1 will then be used for the increase signal and DO2 for the decrease signal. This option cannot be combined with an alarm output.

## **Domestic hot water control**

The water temperature is kept constant by controlling the output signal on AO1. A single PID control loop is used.

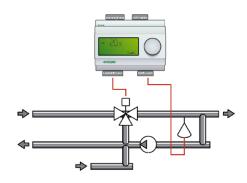

This control mode requires a sensor, "Supply water temperature", on All

## Technical data

Supply voltage OP10: 24 V AC ±15 %, 50...60 Hz

OP10-230: 230 V AC +10 %, -15 %, 50...60 Hz

Internal consumption 4 VA
Ambient temperature 0...50°C
Storage temperature -20...70°C
Ambient humidity Max. 95 % RH

Display Numeric/graphic, backlit

Protection class IP20

Housing material Polycarbonate, PC

Terminals Disconnectable, so-called lift type for cable cross-section 2.5 mm<sup>2</sup>

Weight OP10-230: 370 g

OP10: 215 g, including terminals

Colour Casing: Silver

Bottom part: Dark grey

Low Voltage Directive (LVD) standards: OP10-230 conforms to the requirements of the European Low Voltage Directive (LVD) 2006/95/EC through product standard 60730-1

and EN 60730-2-9.

EMC emissions & immunity standards: This product conforms to the requirements of the EMC

Directive 2004/108/EC through standards EN 61000-6-1 and EN 61000-6-3.

RoHS: This product conforms to the Directive 2011/65/EU of the European Parliament and

of the Council.

Inputs

Analog inputs Three

All PT1000 sensor, working range 0...+84°C, accuracy ± 0.5°C
Al2 PT1000 sensor, working range -30...+54°C, accuracy ± 0.5°C
SPI PT1000 setpoint device, working range 0...40°C, accuracy ± 0.5°C

Universal input One analogue or digital input

AI PT1000 sensor, working range 0...84°C, accuracy  $\pm 0.5$ °C

or DI Potential-free closing contact

AGND Reference for AI and for UI when used as analog input

UI+ Reference for UI

Digital inputs Closing potential-free contact

DI+ Reference for DI

OutputsTwo analogue and three digital outputsAO0...10 V DC; 8 bit D/A short-circuit protectedDO1 and DO2Triac controlled, 24 V AC, 0.5 A continuousDO3Change-over (SPDT) relay, 230 V AC, 5 A

## Wiring

OP10


## OP10-230V

Terminal	Designation	Function
1	G	24 V AC
2	G0	only Optigo 10
3	-II-	Opugo 10

Terminal	Designation	Function
1	L	230 V AConly
2		Optigo 10-230
3	N	

Terminal	Designation	Function
10	Common	
11	NO	Change-over relay 5A
12	NC	
13	G	Reference for DO1 and DO2
14	DO1	Digital output
15	DO2	Digital output
20	AGND	Reference for AO1 and AO2.
21	AO1	010 V DC output
22	AO2	010 V DC output
40	DI2	Digital input
41	DI+	Reference for DI1 and DI2
42	DII	Digital input
43	UI+	Reference for UI1
44	UII	Universal input for PT1000 or digital
50	AGND	Reference for All
51	AII	PT1000 temperature sensor input
52	AGND	Reference for AI2
53	AI2	PT1000 temperature sensor input
54	SPI	Input PT1000 setpoint device

## Dimensions

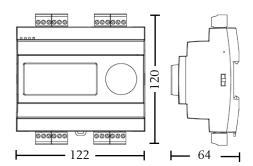

(mm)

## Product documentation

Document	Туре
Optigo OP10 manual	Optigo OP10 user manual

The product documentation is available for download from www.regin controls.  $\ensuremath{\mathsf{com}}.$ 

Head office Sweden

Phone: +46 31 720 02 00 Web: www.regincontrols.com

Mail: info@regin.se

