




# EasyImage

Image processing library

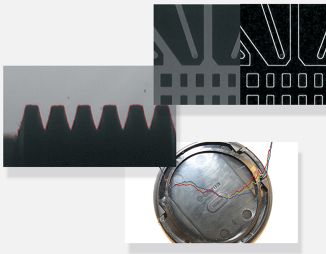

## At a Glance

- Set of optimized fundamental image processing and analysis functions
- Convolution and morphology
- Geometric transformations
- Histogram computation and analysis
- Noise estimation and reduction
- HDR (High Dynamic Range) image fusion

## Benefits

### Open eVision Studio: Evaluation, prototyping and development tool

Open eVision Studio is the evaluation, prototyping and development tool of Open eVision. Its intuitive graphical user interface allows you to call and immediately see the result of any of eVision's 2D image processing functions. A scripting functionality generates the corresponding code, which can then be copied and pasted into your application.

Open eVision Studio is free (when using Open eVision 2.0 and above) and does not require any license.

Just click on [DOWNLOAD OPEN EVISION STUDIO](#) and install Open eVision. Sample images, manuals and sample programs are included.

### EasyImage Description

- EasyImage includes operations usually performed as pre-processing steps to improve the image quality and obtain a good contrast between the background and the objects to be inspected.
- EasyImage supports gray-level and color images. Selected morphology functions are also optimized for binary (1-bit per pixel) and bi-level images.
- EasyImage includes numerous image processing functions, such as enhancement and restoration by linear or non-linear filtering, arithmetic and logic operations, geometric transformations for image registration, histogram analysis for thresholding, projection, ...

### Flexible Masks

- Flexible Masks provide a powerful way of restricting the processing to freely selected parts of the image.
- They are supported by selected image analysis functions.

### EasyImage includes the following functions:

- Gain / Offset change: Normalization, Uniformization, Lookup table mapping
- Thresholding: Automatic thresholding, Min residue, max entropy, isodata, Manual thresholding; Single threshold (absolute and relative), Double threshold, Histogram-based threshold
- Arithmetic operations: Addition, Subtraction, Multiplication, Division, Copy, Invert, Module, Shift

- HDR (High Dynamic Range) image fusion
- Logical and bitwise operations: AND, OR, XOR, NOT
- Pixel comparison, Minimum, maximum
- Histogram equalization
- Linear filtering: Edge detection (Laplacian, Gradient, Prewitt, Sobel, Roberts filters), Sharpening, Smoothing (Gaussian and uniform filters). Custom kernel filtering: Kernel creation and management functions.
- Non-linear filtering: Morphological operators (Erosion, Dilation, Opening, Closing, Thinning, Thickening, Top-hat filter, Hit-and-miss transform, Morphological distance), Median filter
- Geometric transformations: Image registration (alignment), Horizontal and vertical mirroring, Translation, scaling and rotation with optional interpolation, LUT-based (un)warping
- Vector operations, Projection, Profile sampling (line segment, path, contour) and analysis
- Statistics: Measurement of Area, Binary moments, Weighted moments, Gravity center, Pixel count and pixel statistics, Minimum and maximum gray-level value, Average, variance and standard deviation
- Histogram computation and analysis
- Image focusing
- Noise estimation and reduction: Spatial noise reduction (Convolution, Median filters), Temporal noise reduction (Recursive average, Moving average, Average), Noise estimation (Root-mean-square noise, Signal-to-noise ratio)
- Elimination of the interlaced images artifacts by rebuilding or re-aligning fields
- Feature point detectors: Harris corner detector, Canny edge detector
- Other operations: Overlay, Scalar gradient

## Neo Licensing System

- Neo is the new Licensing System of Euresys. It is reliable, state-of-the-art, and is now available to store Open eVision and eGrabber licenses.
- Neo allows you to choose where to activate your licenses, either on a Neo Dongle or in a Neo Software Container. You buy a license, you decide later.
- Neo Dongles offer a sturdy hardware and provide the flexibility to be transferred from a computer to another.
- Neo Software Containers do not need any dedicated hardware, and instead are linked to the computer on which they have been activated.
- Neo ships with its own, dedicated, Neo License Manager, which comes in two flavours: an intuitive, easy to use, Graphical User Interface and a Command Line Interface that allows for easy automation of Neo licensing procedures.

## All Open eVision libraries are available for Windows and Linux

- Windows 7 to Windows 10, x86 (32 bits) and x86-64 (64 bits)
- Linux x86-64 (64 bits) with a glibc version 2.18 or newer

## Applications

### Machine Vision for the General Manufacturing Industries

- Image enhancement
- Presence / Absence check
- Surface analysis

### Life Sciences & Medical

- Noise reduction for Xray imaging

# Specifications

## Software

---

### Host PC Operating System

- Open eVision is a set of 32-bit and 64-bit libraries that require a processor compatible with the SSE4 instruction set.
- The Deep Learning Bundle is only available in the 64-bit Open eVision library.
- Open eVision can be used on the following operating systems:
  - Windows 10 (32- and 64-bits)
  - Windows 8 (32- and 64-bits)
  - Windows 7 (32- and 64-bits)
  - Linux 64 bits (x86-64 only) with a glibc version greater or equal to 2.18
- Since Open eVision 2.6, discontinued support of:
  - Windows Vista 32-bits Service Pack 1
  - Windows XP 32-bits Service Pack 3
  - Windows Embedded Standard 2009 32-bits
- Remote connections
  - Remote connections are allowed using remote desktop, TeamViewer or any other similar software.
- Virtual machines
  - Linux virtual machines are supported. Microsoft Hyper-V and Oracle VirtualBox hypervisors have been successfully tested.
  - Windows virtual machines are not supported.
- Minimum requirements:
  - RAM: 8 GB
  - Display size: 800 x 600. 1280 x 1024 recommended.
  - Color depth: 16 bits. 32 bits recommended.
  - Between 100 MB and 2 GB free hard disk space for libraries, depending on selected options.

---

### APIs

- Supported Integrated Development Environments and Programming Languages:
    - Microsoft Visual Studio 2008 SP1 (C++, C#, VB .NET, C++/CLI)
    - Microsoft Visual Studio 2010 (C++, C#, VB .NET, C++/CLI)
    - Microsoft Visual Studio 2012 (C++, C#, VB .NET, C++/CLI)
    - Microsoft Visual Studio 2013 (C++, C#, VB .NET, C++/CLI)
    - Microsoft Visual Studio 2015 (C++, C#, VB .NET, C++/CLI)
    - Microsoft Visual Studio 2017 (C++, C#, VB .NET, C++/CLI)
    - Microsoft Visual Studio 2019 (C++, C#, VB .NET, C++/CLI)
    - QtCreator 4.15 with Qt 5.12
  - Since Open eVision 2.5.1, discontinued support of:
    - Borland C++ Builder 6.0 update 4 (C++)
    - CodeGear Delphi 2009 (Object Pascal)
    - CodeGear C++ Builder 2009 (C++)
    - Microsoft Visual Studio 6.0 SP6 (C++, Basic)
    - ActiveX API
  - Since Open eVision 2.4.1, discontinued support of:
    - Embarcadero RAD Studio XE4 and XE5 (C++, Object Pascal, 32 bits only)
-

## Ordering Information

---

Product code - Description

- 4001 - EasyImage for USB dongle
  - 4051 - EasyImage for PAR dongle
  - 4101 - EasyImage for board licensing
  - 4151 - Open EasyImage for USB dongle
  - 4201 - Open EasyImage for PAR dongle
  - 4251 - Open EasyImage for soft-based licensing
  - 4301 - Open eVision EasyImage
- 

Optional accessories

- 6512 - eVision/Open eVision USB Dongle (empty)
  - 6513 - eVision/Open eVision Parallel Dongle (empty)
  - 6514 - Neo USB Dongle (empty)
-



## EMEA

### **Euresys SA**

Liège Science Park - Rue du Bois Saint-Jean, 20  
4102 Seraing - Belgium

Phone: +32 4 367 72 88

Email: sales.europe@euresys.com

## EMEA

### **Sensor to Image GmbH**

Lechtorstrasse 20 -  
86956 Schongau - Germany

Phone: +49 8861 2369 0

Email: sales.europe@euresys.com

## AMERICA

### **Euresys Inc.**

27132-A Paseo Espada - Suite 421  
San Juan Capistrano, CA 92675 - United States

Phone: +1 949 743 0612

Email: sales.americas@euresys.com

## ASIA

### **Euresys Pte. Ltd.**

750A Chai Chee Road - #07-15 ESR BizPark @ Chai Chee  
Singapore 469001 - Singapore

Phone: +65 6445 4800

Email: sales.asia@euresys.com

## CHINA

### **Euresys Shanghai Liaison Office**

Unit 802, Tower B, Greenland The Center - No.500 Yunjin Road, Xuhui District  
200232 Shanghai - China

Euresys 上海联络处

上海市徐汇区云锦路500号绿地汇中心B座802室  
200232

Phone: +86 21 33686220

Email: sales.china@euresys.com

## CHINA

### **Euresys Shenzhen Liaison Office**

Room 1202 - Chinese Overseas Scholars Venture Building  
518057 Shenzhen - China

Euresys 深圳联络处

深圳南山区留学生创业大厦1期1202  
518057

Phone: +86 755 86506902

Email: sales.china@euresys.com

## JAPAN

### **Euresys Japan K.K.**

Expert Office Shinyokohama - Nisso Dai 18 Building, Shinyokohama 3-7-18, Kohoku  
Yokohama 222-0033 - Japan

〒222-0033

神奈川県横浜市港北区新横浜3-7-18 日総第18ビル エキスパートオフィス新横浜

Phone: +81 45 594 7259

Email: [sales.japan@euresys.com](mailto:sales.japan@euresys.com)

More at [www.euresys.com](http://www.euresys.com)

